



PARTS MAP

Model: _____

Serial Number: _____

Notes:

Upper Casing Section

- 1 Hot Water Basin
- 2 XF Spray Nozzles
- 3 Axial Fan and Bushing Assembly
- 4 ENDURADRIVE® Motor
- 5 ENDURADRIVE® ME Support
- 6 Fan Guard Assembly
- 7 Fan Cylinder
- 8 Casing Panels
- 9 Full Access Internal Service Platform


ENDURAFLOW™ Heat Transfer System

- 10 External Louvers
- 11 Splash Fill
- 12 Baffles
- 13 Internal Drift Eliminators

Lower Pan Section

- 14 Make-Up Valve Assembly
- 15 Float Ball
- 16 Strainer Hood Assembly
- 17 Dual Sloping Basin with TriArmor® Corrosion Protection System
- 18 Internal Walkway
- 19 Access Door (not shown)

Series 5000 Cooling Tower

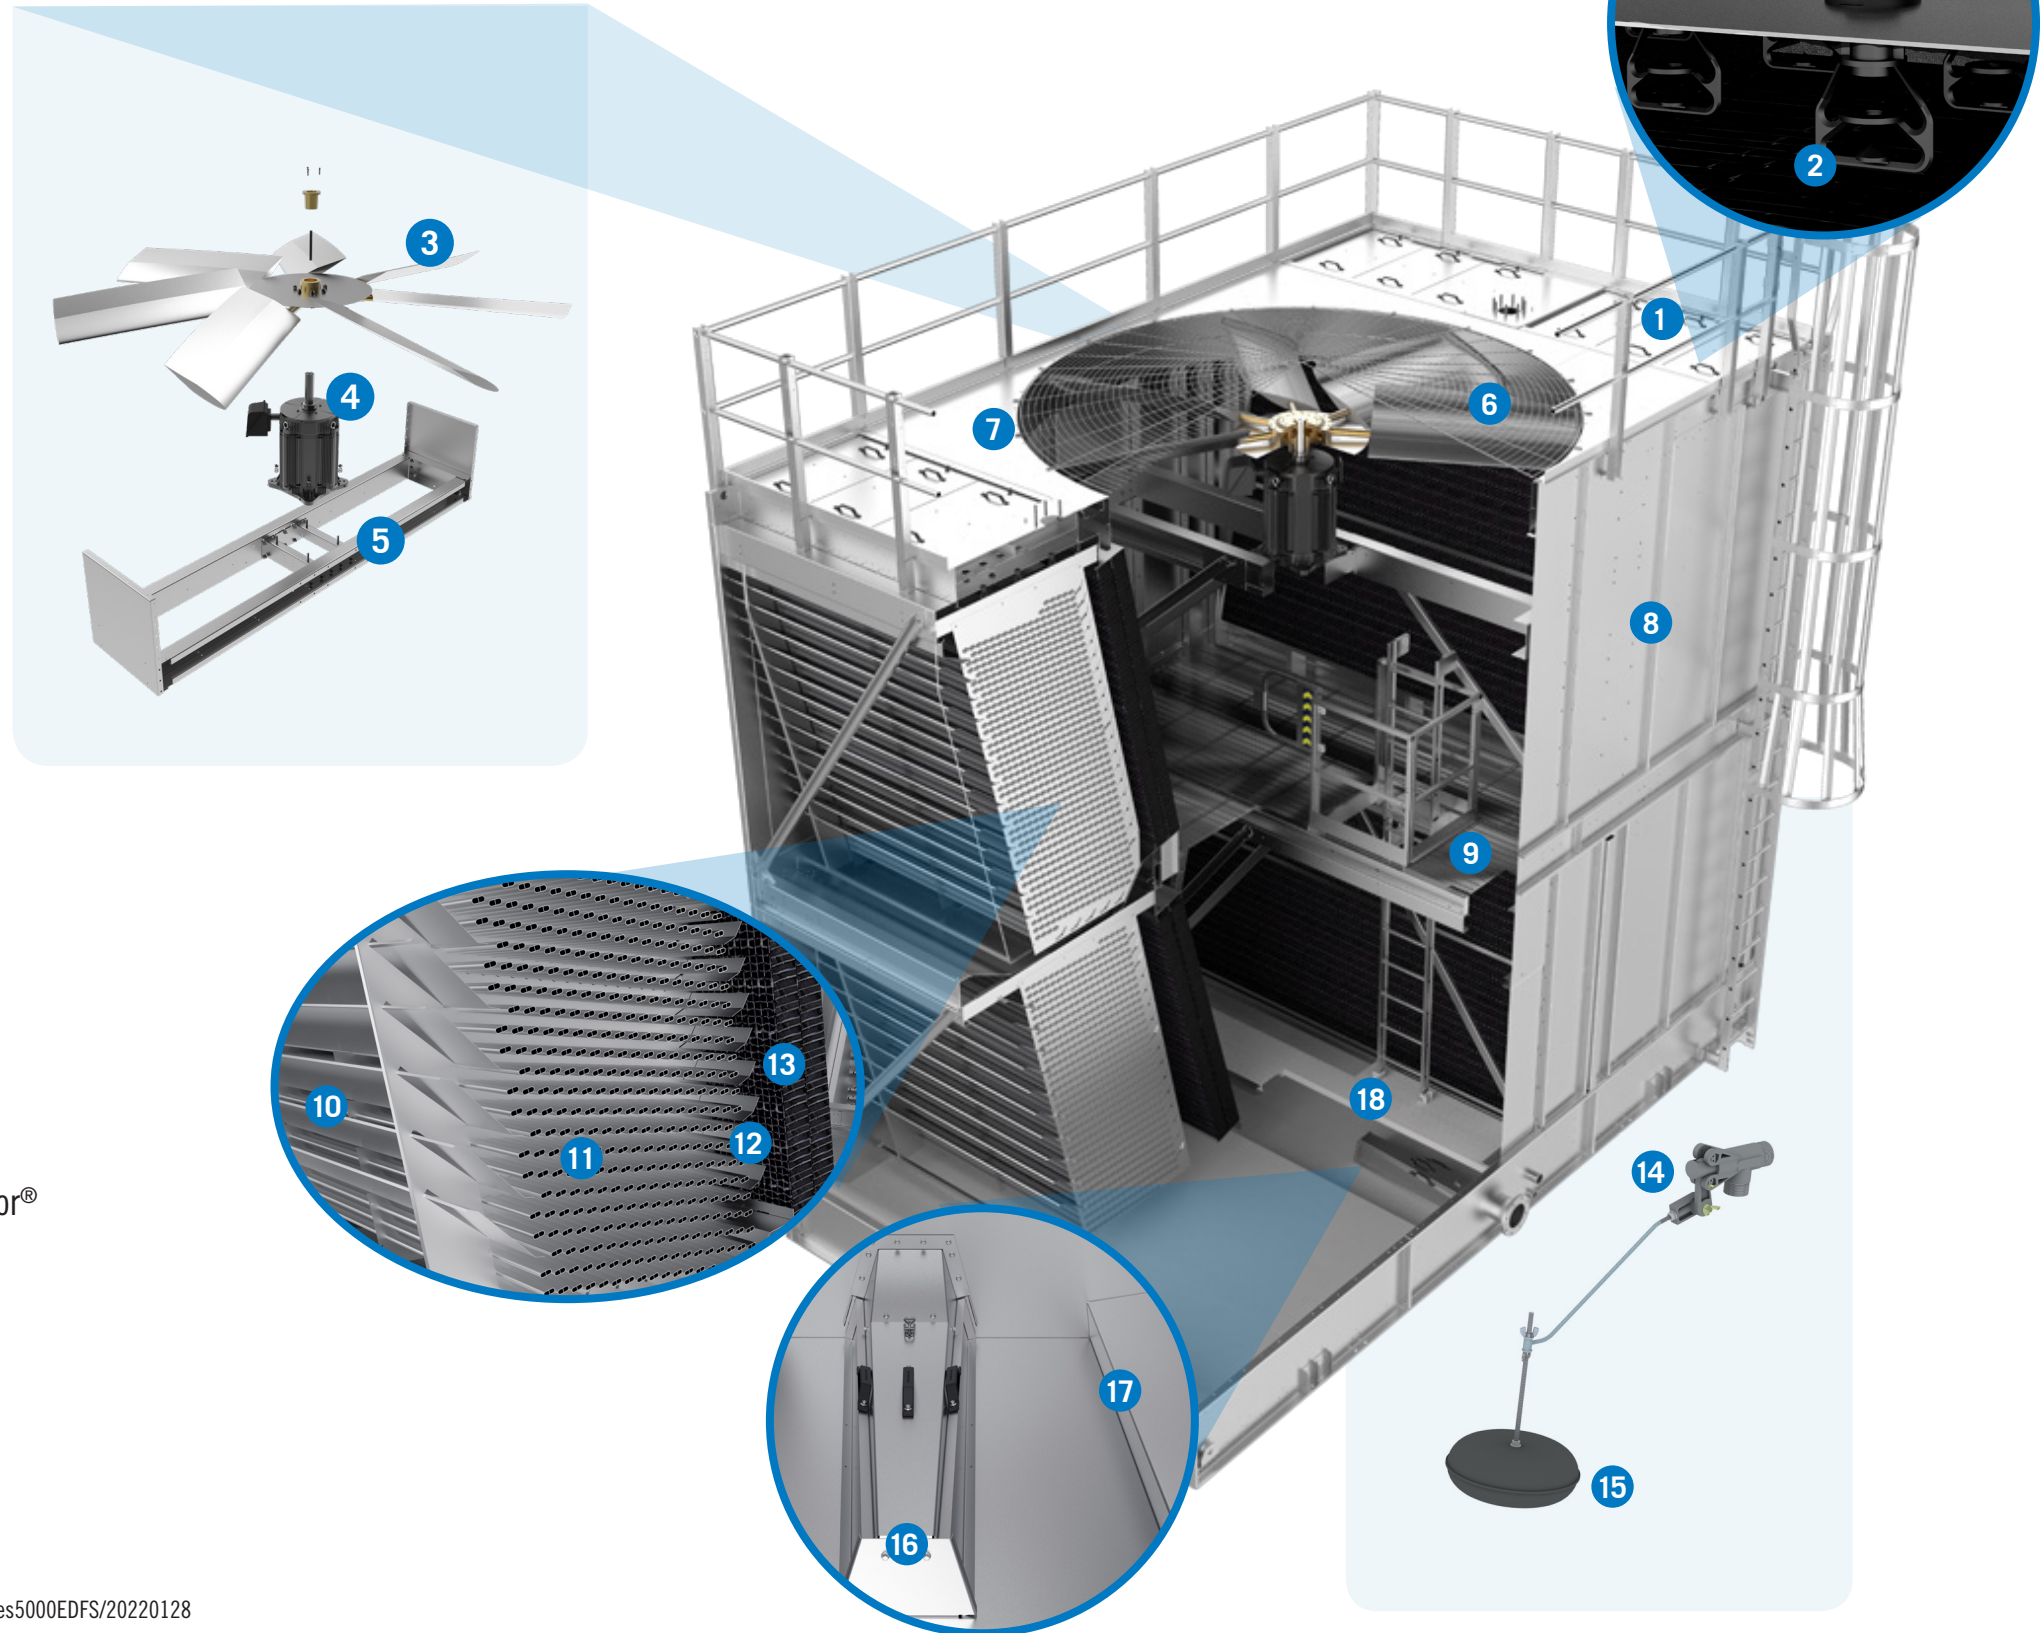

Reduce Downtime
Spare Parts List (page 2)

Recommended Spare Parts

BAC Factory Authorized Parts are manufactured to meet rigorous specifications and are guaranteed to fit your unit and perform as original equipment.

BAC Factory Authorized Parts can be ordered through your local BAC Representative. Most BAC Representatives maintain a local inventory of commonly used parts. For a free unit inspection and a specific parts list for your serial number, contact your local BAC Representative today.

Even with BAC's fast delivery capability, it is still recommended that certain essential and emergency repair part be maintained in your inventory to minimize any potential downtime.



Find my BAC Rep to order parts, get maintenance tips, and get a free unit inspection: www.baltimoreaircoil.com/RepFinder



Series 5000 Cooling Tower

Basic Recommended Spare Parts

Basin Heater & LWCO (if equipped)

Float Valve Kit & Float Ball

Spray Nozzles

Suction Strainer

Parts to Consider if Extended Downtime is a Concern

Fan

Fan Motor



Scan to locate your local BAC Representative